


U1

fully automatic
coffeemachine

User manual

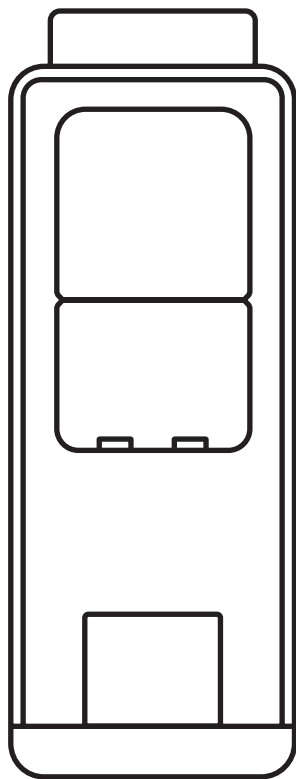

DANGER

1. The machine is an electrical appliance; there is a risk of short circuit and electric shock if it is in contact with water.
2. Never immerse the coffee machine itself, the mains cable or the mains plug into water or other liquids to prevent electric shock and fire disaster.
3. Steam and hot water can scald users. Be careful when touching steam mouth.
4. The connecting cable should not be too long to avoid it enwind or turnover appliance. The connection between the mains supply must be a three-wire-grounded type extension cable of which cross-section no less than 1.5mm^2 . Select a location which does not allow children to reach the extension cable.
5. Do not use the coffee machine for other than intended use. Do not make any technical change of the machine. Ensure safe handling of the machine, or negative effects could happen.
6. Pull the plug from outlet when not using for a long time or before cleaning. Before cleaning the machine, make sure it cools down.

WARNING

1. Read the coffee maker user manual carefully before first use.
2. Never take the machine apart for repair by yourself. If machine failure happens, make it repair by authorized dealers.
3. Do not use the same power socket with other electric appliance. Contact with live wires or components could lead to serious injury or even death.
4. The supply voltage must correspond to the machine's appointed voltage.
5. Do not shake the machine or move its protective parts when it is working.
6. Contact the mains cable, the mains plug or the coffee machine itself with water or other liquid could lead to injury because of machine burning and electric shock.
7. Keep children away from machine's all kinds of packaging, paper boxes and plastic bags.
8. Do not use the coffee machine outdoors.
9. Do not hang the mains cable down the table in order to avoid abrasion to it, which could result in electric leakage and hurt operator.
10. Place the machine on a flat and horizontal surface, and make sure nobody would turn it over to avoid harm.
11. Do not place the machine nearby hot surface or fire.



1. Do not immerse the machine in water or other liquid.
 2. Besides water in normal temperature, do not pour any other liquids into the water tank, like warm water, hot water and milk.
 3. Do not put stuffs like instant coffee, soup, rice, beans, spices, chocolate beans in bean tank. Water scrubbing bean tank would damage the machine.
 5. Do not use the coffee machine in the temperature lower than 0°C. If used coffee machine needs to be transported in the temperature lower than 0°C, consult the dealer and carry it after drainage as required otherwise the coffee machine could be damaged after the water freezes inside.
 6. Do not put the coffee machine in narrow space because it releases hot steam. Place the machine on a flat and horizontal surface and leave at least 100mm between the wall and machine.
- If the supply cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified persons to avoid a hazard.

Usage

1. Open water tank add water.
2. Open bean box, add coffee bean.
3. Plug the machine, when buttons light up, touch on/off button.
4. Machine start to warming up and selfclean. Choose manual and touch to start "▶".




Icons

Touch "⏻" on or standby.
When "🔒" light up means
childlock open, long
touch turn it off.


Choose manual, adjust
temperatue and volume,
touch "▶" make coffee.

Touch "💧" clean brewing
unit; Touch touch to
Descaling.

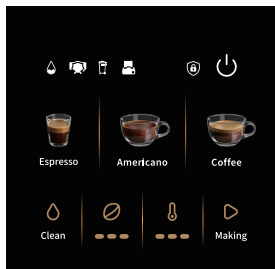

Mark:

There is a red float at
the water drip tray, pls
note and clean to avoid
overflow.

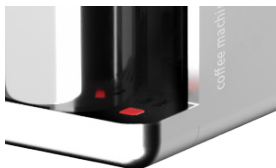


Warning:

💧 No water	Add water, and put back water tank
☕ Brewing unit miss	Put back the brewing unit
🗑️ Clean waste box	Take out water drip tray, clean waste box
☕ Miss water drip tray	Put back the water drip tray

Removable parts


Open and assembly bean box

Twist as pic.

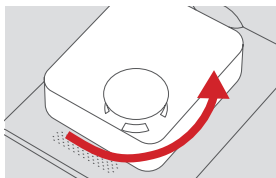


How to assembly:

1. Pls check if assemblyed well according to pic.

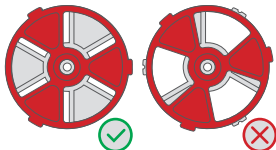

2. Assembly back according to pic.

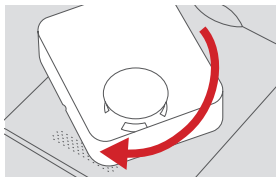

Clean and assembly grinder set


1. Take out bean box.
2. Pull up the handle of grinder shell.



3. Press the lock button.
Rotate grinder shell
counter-clockwise.



4. Pull out the grinder
shell.

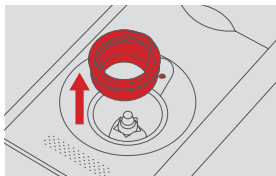

How to assembly:

1. Align the raised
indicator on the outside
of the grinder shell with
the groove at the bottom
of the inner wall, and
press down firmly when
inserting it.




2. Press and hold down
the grinder shell lock,
then rotate the sleeve
clockwise until a "click"
sound indicates it is in
position.




3. Press back the grinder handle.



4. The grinder shell lock rebound.

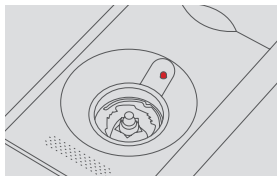


Clean:
Use brush clean the
grinder shell and grinder
cargo.

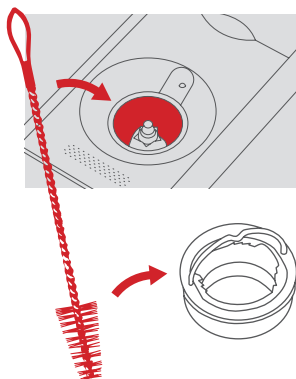

Caution: Don't be hurt
by grinder

Clean and assembly brewing unit


1. Take out beverage cap.

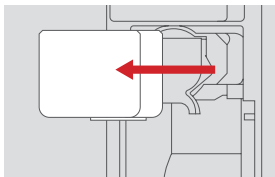

2. Press to the right side button with your thumb.


3. Pull out brewing unit.

Caution: brewing unit maybe hot

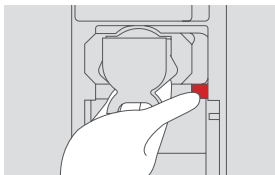


Assembly method:

Push inwards with the water outlet facing downwards, it will have "da" as indication means locked.

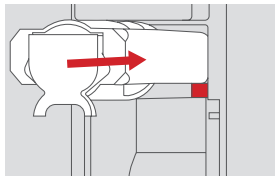

Clean brewing unit:

Rinse with tap water.

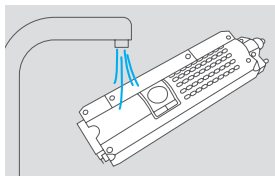

! Exception Handling

The coffee tastes very weak	Check" Open and assembly bean box" and " Clean and assembly grinder set" chapter
No coffee come out	Check" Clean and assembly Brewing unit" chapter
Bean box shaking when grinding	Pls check if handle of grinder shell handle



WARNING

In case of disabled, broken or other damage caused by the machine down to the ground, pull out the power plug of the machine immediately.

When the machine is broken, contact with authorized dealers.


Only authorized dealers and manufacturer technicians are allowed to repair the machine. Manufacturers do not take any responsibility if users go against the user manual to repair the machine by themselves.

Pull out the power plug of broken machine immediately and send it to the appointed maintenance center.




Downloading the TUYA APP from the APP store.

After power supply for the machine, turn on the power supply switch which is at the back side of the machine, then long touch the espresso key reset the wifi.

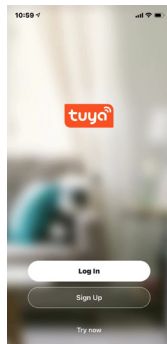


Add machine

1. Turn on the Bluetooth, GPS, connect to the Wi-Fi (2.4G only).

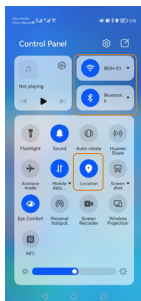


Android

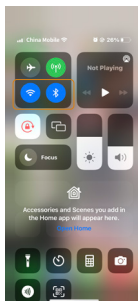


IOS

2. Tap icon "+" choose the WIFI name the input the password, tap icon "Next".

Waiting the coffee machine connected the APP.

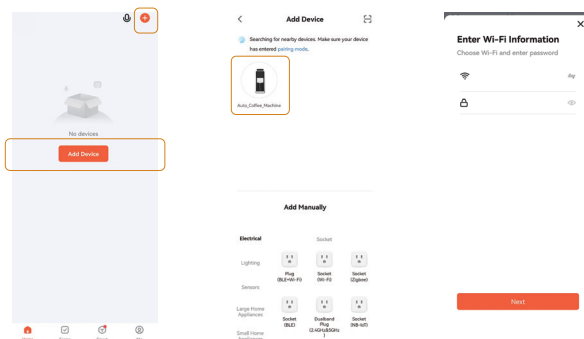




3.If connected, tap icon " Done " you can control the coffee machine by APP now.

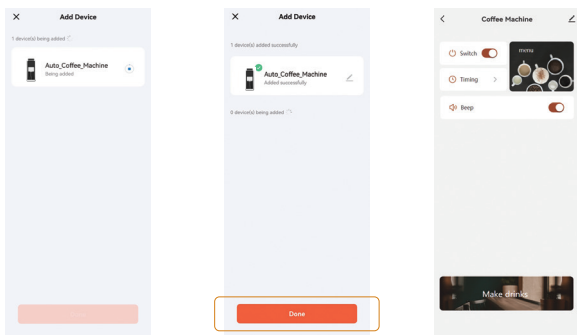

Share machine

Choose the devices, then touch the icon at the right top side of the phone screen, then choose the share device icon, send the code to your other user.

If you change the data on the APP, the data will be changed the same in the device.

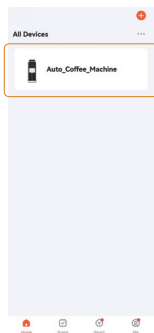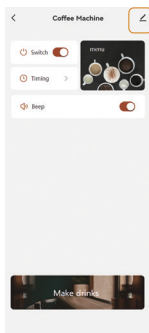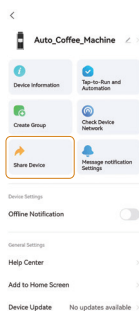

Warranty Card

After-sales Service

1. We grant a 1-year warranty (totally cups number less than 10,000) for our coffee machines in accordance with the statutory provisions of the country in which the coffee machine was purchased.
2. The warranty items do not apply to any kind artificial damage, which include artificial ruin, blockage caused by use of unqualified coffee beans and so on.
3. The warranty period begins with the original date of purchase. Claims can only be made under warranty if the original invoice or proof of purchase is submitted.

Dealer certification

